


www.lelas.fr +33 (0)1 48 76 62 62



DESCRIPTION


Type 250 S1CL: Washable, sterile aera model

Aluminium face plate protected by a polycarbonate membrane with integral keypad and LED

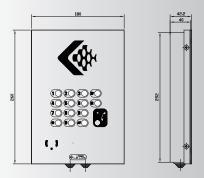

- Steel backing-case can be fitted flush into a wall, desk or pod
- The face-plate simply clips on and off.

Type 250 S1CLD: integral fully-fitted version

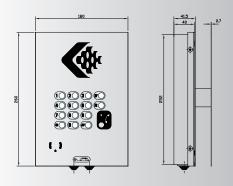



TLS 250

The latest model in the LE LAS range of hands-free telephones exploits the most recent technical advances: it offers a high level of flexibility and ease of use thanks to the latest microprocessor technology. (Detection of variable programmable tones from 300 to 500 Hz) - Also operates on line with reduced current (guaranteed down to 18 mA) -Robust weatherproof enclosure using techniques proven over many years.

MRSA and other superbugs have tightened their grip on our hospitals, with the result that patients often study "league-table" before choosing a hospital for a procedure.

The TLS range of hands-free, loud-speech telephones can be disinfected or hosed down and depend upon no earpiece or mouthpiece contact for effective communication.

MRSA - Just wash it away!

It is equipped with a full keypad which provides a number of one-touch autodials ("soft keys").

Approved in UK - BABT approval No 504612 and in france ART No 98656P.

FEATURES AND FACILITIES

- Telephone line driven (no power supply needed)
- One-line reassurance indicator Weatherproof loudspeaker, volume 78 dB
- Weatherproof Electret microphone
- Weatherproof protected pushbutton keypad can be washed or disinfected
- Electronic card with microprocesseur with memory back-up
- Programmable ringing tone, reception volume, duration of conversation before automatic cleardown, pre-programmed auto-dial numbers, automatic cleardown
- IP66

OPTIONS

Relay card - for gate and door entry Broadcast over extention loudspeakers

| REFERENCE | DESIGNATION |
|---------------|-------------------------------|
| TLS 250 S1CL | Flushfilling version |
| TLS 250 S1CLD | Integral fully-fitted version |

Note: The difference between the flush-filling version and the integral fully-filled version is that the former fits flush, but protrudes by the depth of the face-plate, whereas the latter presents a true "flush" surface.





Agréé ART - Conform to the CE normalisation

// CT 03 to on! I should a moiterile